




Document No: 8P1151 Rev.00

HC 32芯分段式插座信号连接器安装规范 HC 32POS socket sectional type signal connector assembly manual




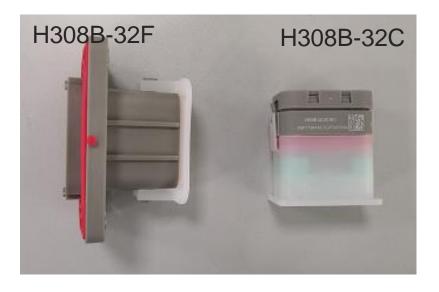

HC™ 32芯信号连接器插座组装规范 HC™ 32POS Signal Connector Receptacle Assembly Manual


步骤1:取出连接器组件,按图示取下防尘盖,

Step1: Take out the connector assembly and remove the dust cover as shown.

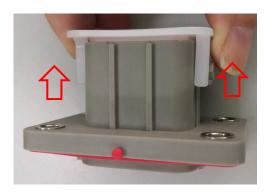

两边均匀用力取出防尘 盖备用 Remove the dust cover with even force on both sides



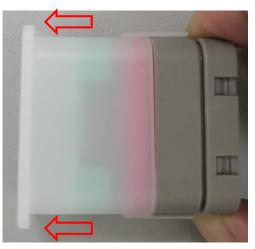

按下卡扣两边均匀用力 取出防尘盖 Press the buckles then Remove the dust cover with even force on both sides



步骤2:端子规格与线材型号如下,

Step2: The following table lists the terminals specifications and cable specifications.

接头PIN位 Connector Pin	端子型号 Terminal Part Number	剥芯线长度 Stripping length	线规 Wire Gauge	线径 Wire OD	芯线结构 Conductor construction
1 / 14 / 26 / 7 /19 / 32	H3TM16H04	4.5+/-0.2	18AWG	2.78+/-0.1mm	41/0.16
2~6 8~13 15~18 20~25 27~31	H3TM20H04	4.0+/-0.2	20AWG	1.60+/-0.1mm	19/0.2



Manual P/N: 8P1151 _ Rev.00 20210823

步骤3:根据要求长度与Pin位切线打端,

Step3: Cut and stripping wire then Crimp terminals according to the required length and quantity.

接头PIN位 Connector Pin	端子型号 Terminal Part Number	剥芯线长度 Stripping length	线规 Wire Gauge	芯线压接高度 Crimping height (mm)	芯线压接宽度 Crimping width (mm)	参考拉力 Retention Force
1 / 14 / 26 / 7 /19 / 32	H3TM16H04	4.5+/-0.2	18AWG	1.15+/-0.05	2.65+/-0.05	90N
2~6 8~13 15~18 20~25 27~31	H3TM20H04	4.0+/-0.2	20AWG	1.10+/-0.03	1.65+/-0.05	75N

压接高度和拉拔力需要配合金相分析,客户才能判断压接质量合格,端子压接需要满足压缩比要求:80-90%。

Customers need to reconfirm cross section on crimping area and pull out force test to confirm the quality of crimp process, Terminal crimping needs to meet the compression ratio requirements: 80-90%.

 18AWG 压模: D-392
 20AWG 压模: D-393-1

 18AWG Die: D-392
 20AWG Die: D-393-1

■ 步骤4:将压接好的电线插进连接器,注意插接的电线大小要与孔号相匹配。


Step4: Push crimped terminals into connector holes, the wire size should match the hole size.





■ 步骤5:将装好端子的接头如图示组装好.

Step5: Assemble the whole connector with the connector terminal installed as shown in the figure.

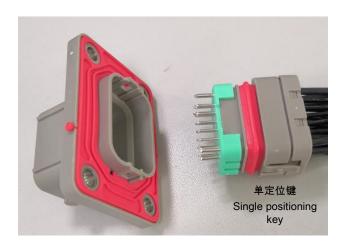




HC 32芯分段式信号连接器插座拆卸规范 HC 32POS Signal Sectional Type Connector Receptacle Disassembly Manual

步骤1:用细头螺丝刀插进前盖的方槽中,把前盖顶出。

Step1: Insert a thin-headed screwdriver into the square slot of the front cover and push it out.



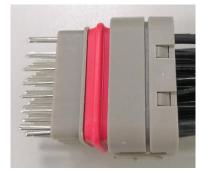

步骤2:将螺丝刀插进槽孔中,将卡扣往外顶,直至把后盖顶出 Step2:Pry open the rear cover with tweezers or a thin screw driver



用镊子或螺丝刀将卡位翘起 Use tweezers or thin screw driver to pry up the back cover Buckle position



后盖退出 withdraw the rear cover

■ 步骤3:用镊子将密封塞退出胶壳。用镊子将密封塞拉至距离胶壳约45mm处

Step3: Pick the red sealing rubber with tweezers out of the plastic shell, and pull the sealing part about 45mm away from the shell, as below pictures shown









■ 步骤4:将专用工具插进端子插孔里,按下工具顶部的按钮,将端子退出塑料壳,完成连接器拆卸

Step4: Insert the special tool into the terminal holes, then press the button on top of the tool, extract the terminal

from plastic case









连接器型号 Connector type	端子类型 Terminal type	专用工具编号 Special tool P.N
H308B-32F + H308B-32C	18#(Power) 18#(电源)	TQXHC16
	20#(Signal) 20#(信号)	TQXHC20

■ 步骤5:将端子伸进专门工具中(专门工具圆筒套住端子)

Step5: Insert terminals into the special tool(a tool of hollow cylinder) so the sealing rubber will not be damaged when the terminals go through









连接器型号 Connector type	端子类型 Terminal type	专用工具编号 Special tool P.N
H308B-32F + H308B-32C	18#(Power) 18#(电源)	T00301
	20#(Signal) 20#(信号)	T00302

步骤6:推动专用工具前端圆筒穿过密封塞

Step6: Push the tool gently through the sealing rubber




步骤7:拔出端子

Step7: Pull out the terminal from the special tool



■ 步骤8:用镊子将密封圈装入胶壳,再将外盖扣上胶壳

Step8: Press the sealing rubber back into the plastic shell with tweezers then buckle up the back cover

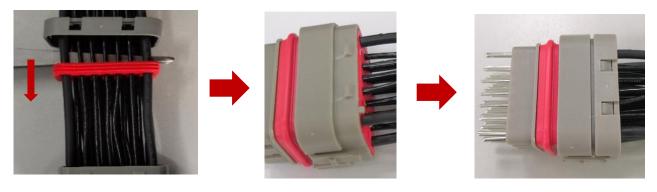

步骤9:盖上后盖

Step9: assemble the back cover.










05/06

步骤10:将接头如图示组装好

Step10: Assemble connector as shown in the figure.

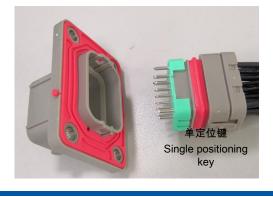



Manual P/N: 8P1151 _ Rev.00 20210823

HC 32芯分段式信号连接器插座和面板的安装要求 HC 32POS Sectional Type Signal Connector Receptacle and Panel Installation requirements

步骤1:插座安装面板要求

Step1: Receptacle Install Panel Requirements

1-1 安装面板平面度不超过0.15mm。

The panel flatness shall not exceed 0.15mm

1-2 表面粗糙度不超过Ra3.2

The roughness of the panel shall not exceed Ra3.2

■ 步骤2:推荐使用螺钉为 M5,锁紧扭矩为 6+/-1N.m。

Step2: The recommended screw is M5 and the locking torque is 6+/-1N.m.

Manual P/N: 8P1151 _ Rev.00 20210823

Amphenol Technical Products International provides the above product specifications for the standard HC Signal series of connectors to assist users in identifying the correct product for the system to which the connectors may be applied. Specifications are subject to change without notice. Contact your nearest Amphenol Corporation Sales Office for the latest specifications. All statements, information and data given herein are believed to be accurate and reliable but are presented without guarantee, warranty, or responsibility of any kind, expressed or implied. Statements of suggestions concerning possible use of our products are made without representation or warranty that any such use is free of patent infringement and are not recommendations to infringe any patent. Specifications are typical and may not apply to all connectors. Note that these specifications are derived from relevant global standards used in the automotive and industrial transportation markets, but they are not a substitute for system level design validation testing, which is the sole responsibility of the system designer and/or end user.

Asia Pacific

ChangZhou, China Tel: +86 519-8981 9713 Add: No.11 Fengxiang Road, New District, Changzhou, Jiangsu P.C: 213001

Asia Pacific

GuangZhou, China
Tel: +86 20-3210 6099
Add: 9th Floor, No. 10, the 4th Street, Kehui Jingu, Luogang District, Guangzhou ,Guangdong P.C: 510663

North America

Winnipeg, Canada Tel: +1 204 697 2222 Add: 2110 Notre Dame Avenue

Europe

Milano, Italy Tel: +39 02 932541 Add: Via Barbaiana 5, 20020 Lainate(MI)

Email: info@Amphenol-GEC.com